KORYO™

USER'S MANUAL

WARRANTY 1 YEAR

KJE 320

Krush

JUICE **EXTRACTOR**

Dear Customer,

Congratulations! Thank you for buying this KORYO appliance. Your new Juice Extractor has been designed for your convenience. We are sure you will get many years of trouble free service from this appliance.

Before commissioning this device please read this user manual carefully. Please retain this user manual, warranty certificate, sales receipt and if possible carton with the inner packaging.

CONTENTS

Identification of Parts 4

Instruction Before Use 5

Juicing 5

Operating Time 5

Maintenance and Cleaning 5

Attention 6

E-Waste Disposal 6

Warranty 7

IDENTIFICATION OF PARTS

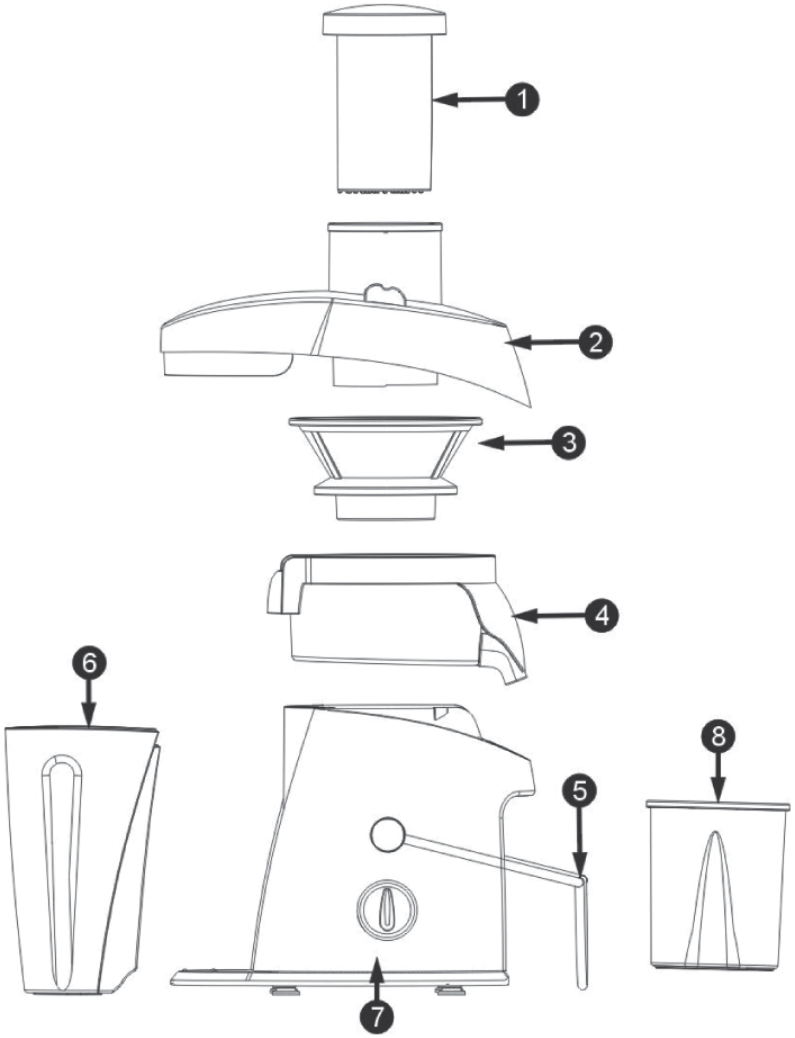

1. Pushing bar
2. Transparent cover
3. Juicing net
4. Middle ring
5. Handle
6. Residue barrel
7. Main machine
8. Juicer jug

INSTRUCTION BEFORE USE

1. This machine is set with a safety unit, if the handle does not fasten the cover or the cutter seat is not fastened, the motor will not run, so ensure that all parts are safely aligned.
2. When disassembling or assembling the juicer, press the upper of feed port of the cover with your hand, then force the handle to slide in or out of cover slot.
3. When disassembling juicing net, first remove the cover and residue barrel, then turn the middle ring up to 30 degrees by holding juicing nozzle with your hand, and take up, the juicing net will automatically leave the rotor.
4. Please check power supply for compliance with rated voltage label of the appliance before use.
5. Clean all the parts properly before use (refer to the section “Maintenance and Cleaning”).
6. Please carefully read the “attentions” before using.

JUICING

1. Before using, please confirm the button switch of the main machine in stop state, in this way, in case assembly is not completed, starting the main machine can be avoided, so unnecessary damage for persons or property avoided.
2. Before juicing, first confirm juicing net and rotor are clutched in position, and there is no hard contact between juicing net cutter and transparent cover. Put the transparent cover on and also put the handle into the cover slot, then turn on the machine.
3. For using, assemble the appliance and turn on power supply, press switch to let the machine run with the loud for 5 second. Put the vegetables or fruits into feed port of the juicer, press with pushing bar evenly and slowly.
4. Note: when pressing food with the pushing bar, force shall be even or indirect, pressing force shall not be more than 1 kg, avoid sudden force, otherwise, juicing effect will be reduced.

OPERATING TIME

This machine is designed with a circular switch with grading of O, I & II (O for Stop, I for Weak grading, II for Strong grading).For juicing, select strong grading and stop for 1 minute after operating the juicer for 1 minute, then use again. After the above operation is performed for three times, stop for 15 minutes, do not operate until the motor is cooled, this prolongs the service life of the machine thus serving you more efficiently.

MAINTENANCE AND CLEANING

1. Keep the motor and parts dry and clean after every use.
2. If the machine is not used for a long time, please store this machine at a dry and well-ventilated place so as to prevent the motor from being damped and going moldy.
3. Do not wash the main machine. When cleaning, only wipe with wet cloth. Other components may be washed directly with water, such as pushing bar, cover, middle seat, residue cup, juice nozzle cover.

ATTENTION

1. This machine should not be used by children or people who suffer from any mental disorder or if used it should be under strict supervision of a responsible person.
2. Operate the machine as per the instructions mentioned in the user's manual and place it on an even table for usage.
3. Before using the Juicing function, ensure that the juicer net and rotor are clutched in position, and there is no hard contact between juicing net clutter and transparent cover. Put the transparent cover on fasten the handle tightly and then turn on the machine.
4. There may be slight peculiar smell and spark, this is normal, after the motor works for some period, the above phenomenon will disappear.
5. If the middle seat and the residue cup start overflowing please cut off the power supply, clean up and then use again.
6. When the power is on, do not put your hand or any ware into the mixing cup or feed pot. Do not open the cup cover while juicing this may result in a harmful accident and may also damage the product.
7. To ensure a prolonged service life this machine is equipped with an over heat temperature protective device that is mounted on the motor. If the motor is used for a long time or overloaded and the temperature rises over normal, power will automatically be cut off. Once the power is cut off and the motor stops, pull out the plug of power supply and wait for the motor to cool (30 minutes approximately) and then use again.
8. Please do not leave the machine unattended while in operation.
9. After using the machine, first pull out the plug of the power supply and then pour out the food.
10. While cleaning the cutter, please put the cutter under running water, do not wash it with hands since the cutters are very sharp.
11. This machine must not be used for others beyond regulated purposes.
12. In case of damaged power supply cord the replacement should be done by an authorised service personnel.

E-WASTE DISPOSAL

This symbol on the product or on the container indicates that this product cannot be eliminated with the general waste. The user is responsible for eliminating this kind of waste by throwing them away at a "recycling point" specifically for electrical and electronic waste. Selective collection and electrical equipment recycling contribute to preserve natural resources and warrant waste recycling to protect environment and health. In order to receive further information about electrical and electronic waste collecting and recycling, contact your Local Council, the service of household waste or the establishment where the product was acquired.

WARRANTY

This product comes with a warranty of 12 months from the date of purchase as specified on the warranty card. This is against all defective material or workmanship. In the event of a defect, Future Value Retail Limited or KORYO Authorized Service Centre undertakes to repair the set, free of charge, during the warranty period.

In the event of a defect developing in the product, contact KORYO Customer Care or KORYO Authorized Service Centre and provide information about the defect, the model number and serial number of the product.

THIS WARRANTY IS VOID IF

1. The completely filled warranty card is not presented to the authorised personnel at the time of servicing of the product.
2. The product is not operated according to the instructions given in the user manual.
3. Defects are caused by improper or reckless use.
4. Modifications or alterations have been made to the product or if the product has been tampered with,in any manner whatsoever.
5. Repairs to the product are carried out by anyone other than an authorised company representative.
6. For defects other than faulty parts or workmanship such as damage due to lightning, abnormal voltage, spillages, dust, accidental damage, etc.
7. The serial number is deleted or altered.
8. Used for any non–domestic purpose.

OTHER TERMS AND CONDITIONS

1. Repairs or replacement will be carried out either by a Future Value Retail Limited authorised customer care centre or by a representative.
2. All expenses incurred in collecting the unit(s) or part(s) thereof from the Customer Service Centre, as well as any other expenses and incidentals will be borne by the customer.
3. Whilst the company will make every effort to carry out repairs at the earliest, it is made expressly clear that the company is under no obligation to do so in a specified period of time.
4. The company or its authorised customer centre reserves the right to retain any part(s) or component(s) replaced at its discretion, in the event of a defect being noticed in the equipment during the warranty

WARRANTY CARD

THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY,
SIGNED AND STAMPED BY THE DEALER ON DATE OF PURCHASE

MODEL NO : _____ SERIAL NO : _____

CUSTOMER NAME : _____

ADDRESS : _____

_____

_____

PHONE NO : RESIDENCE : _____ OFFICE : _____

INVOICE/CASH BILL NO : _____

DATE OF PURCHASE : _____

CUSTOMER SIGNATURE : _____

DEALER'S STAMP

* For service request kindly contact Customer Care Centre at : 1800-425-7722, 080-26577722
* Please mail in queries to feedback@koryoworld.com

Also Available		
Microwave Oven	Mixer Grinder	Split Air Conditioner
Induction Cook Top	Juicer Extractor	Window Air Conditioner
OTG	Juicer Mixer Grinder	Geyser
Electric Cooker	Slow Juicer	Room Heater
Electric Kettle	Steam & Dry Iron	Immersion Heater
Pop-Up Toaster	Hair Dryer	Hand Blender
Sandwich Maker	Vacuum Cleaner	Fan
Electric Pressure Cooker	Washing Machine	Emergency Light

KORYO™

Imported by:
Future Value Retail Limited
Tower C, 9th Floor, 247 Park, L.B.S. Marg, Vikhroli (West),
Mumbai - 400 083, Maharashtra, India.